

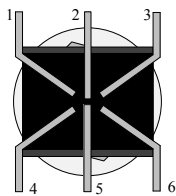


DPDT Foot Switch

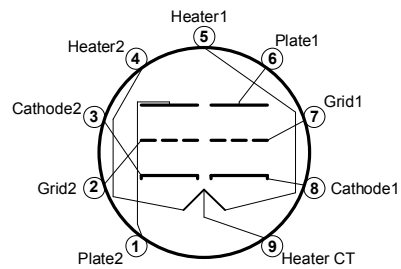

BS170
N-Channel
MOSFET



V1 (12AX7) BASING DIAGRAM

MODTM

www.modkitsdiy.com
Copyright © 2010 by modkitsdiy.com

**"The Persuader" (K-930)
Schematic**